


GJD 303 D-Tect IR Programmer



Programming Guide

Programming with the Key Fob

- The user can individually programme a number of configurable settings as illustrated in the programming chart below.
- 1) Press the programme button as shown in fig. 1 for the number of the Option to be changed i.e. once for range, twice for pulse count, three times for LED, four times for Lux, five times for contacts & six times for timer.
- 2) Wait four seconds until the blue LED indicator goes off.
- 3) The indicator will then flash out the existing setting.
- 4) To change the setting for that option, press the button the number of times required for the new setting.
- 5) The indicator blinks twice and the changes are stored.

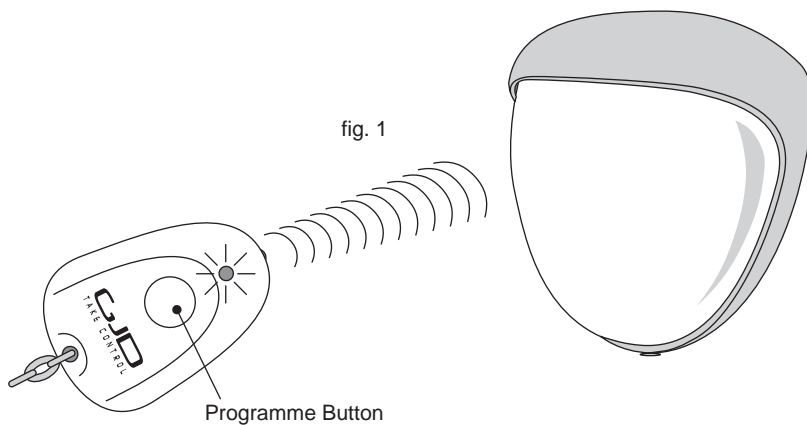


Any alterations made to the **D-TECT²** settings are stored in the detector's non volatile memory.


EXAMPLE

To change the LED Setting from OFF to ON.

- 1) Press the programme button three times and release the button.
- 2) Wait until the indicator goes off.
- 3) The indicator will now flash once.
- 4) Press the programme button twice and release the button.
- 5) The indicator flashes twice showing that the option has been stored and the detector returns to normal operation.

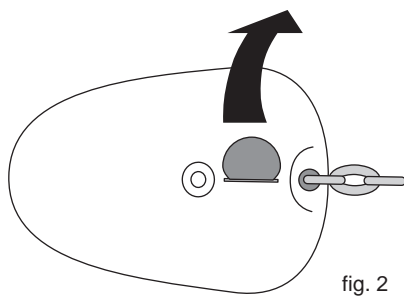

PROGRAMMING CHART									
RANGE MTRS	8	15	20	25	30				
PULSE COUNT	1	2	3						
LED	OFF	ON							
'S' OUTPUT LUX LEVEL	2	5	10	20	30	40	50	24HR	
CONTACTS	CCTV 1 CCTV 2	N/O N/O	N/C N/O	N/C N/C					
TIMER SECONDS	2	5	10	20	30	40	50	60	
PRESS 7 TIMES TO FLASH OUT YOUR SELECTED SETTINGS.									
PRESS 8 TIMES TO RESET THE GJD FACTORY SETTINGS.									

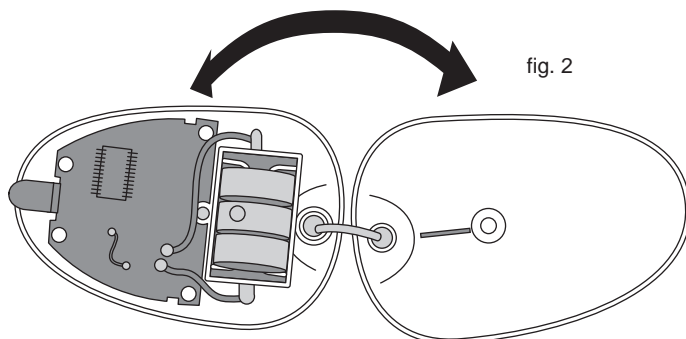

To Activate the Key Fob

Note: Carefully Remove the Battery Isolator Tab to activate the Key Fob. **See fig. 2.**

How to change the batteries

1. Unscrew the screw at the back of the unit. Then open the Battery Compartment.
2. Insert 3 new LR44 size batteries with the ⊕ and ⊖ marks correctly aligned.
3. Carefully close the Battery compartment.

Note on batteries:

- Do not mix different types of batteries or an old battery with a new one.
- To prevent the risk of leakage or explosions, never recharge the batteries, apply heat or take them apart.
- When not using batteries, remove them to prevent battery drain.
- If liquid leaks from the batteries, throw them away. Thoroughly clean the battery compartment with a dry cloth.

GJD Manufacturing Limited

Unit 2, Birch Industrial Estate, Whittle Lane, Heywood, OL10 2SX, UK
 Tel: Sales: +44 (0) 1706 363998 Technical: +44 (0) 01706 363990
 Fax: +44 (0) 1706 363991 E-mail: info@gjd.co.uk Web: www.gjd.co.uk